


# SHAD

## BMW C 650GT '12-'18

KIT RESPALDO W0CG62RV




1 262258 x1

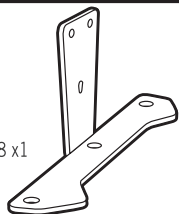

2 303017 x2  
Ø6



3 304012 x2  
M6 x 16 Din 912

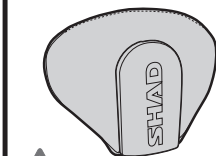

**!** NOT INCLUDED

### **!** WARNING!

**(GB)**

To complete the set, remember to purchase the backrest with your preferred color. Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

**(E)**

Para completar el conjunto, recuerde adquirir el respaldo con su color preferido. No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

**(D)**




Wählen Sie die Rückenlehne in der passenden Farbe um den Satz zu vervollständigen. Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

**(I)**

Per completare il set, non dimentichi di acquistare lo schienale con il suo colore preferito. Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

**(F)**

Pour compléter l'ensemble, rappelez d'acheter le dossier avec votre coloris préféré. Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

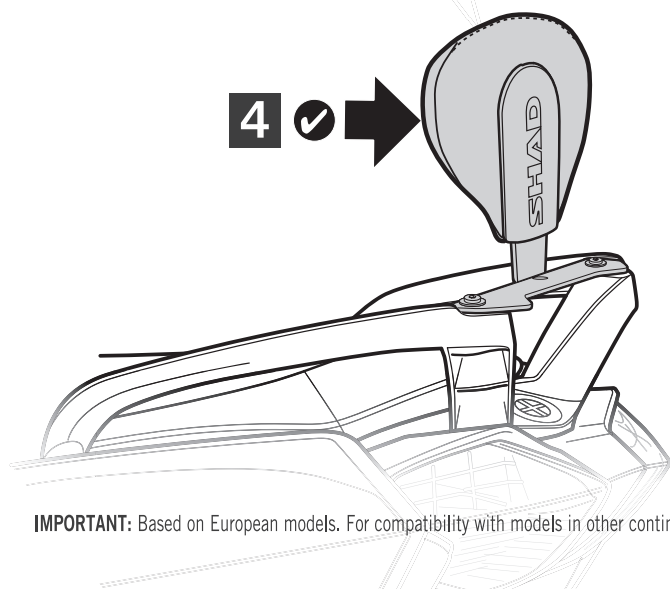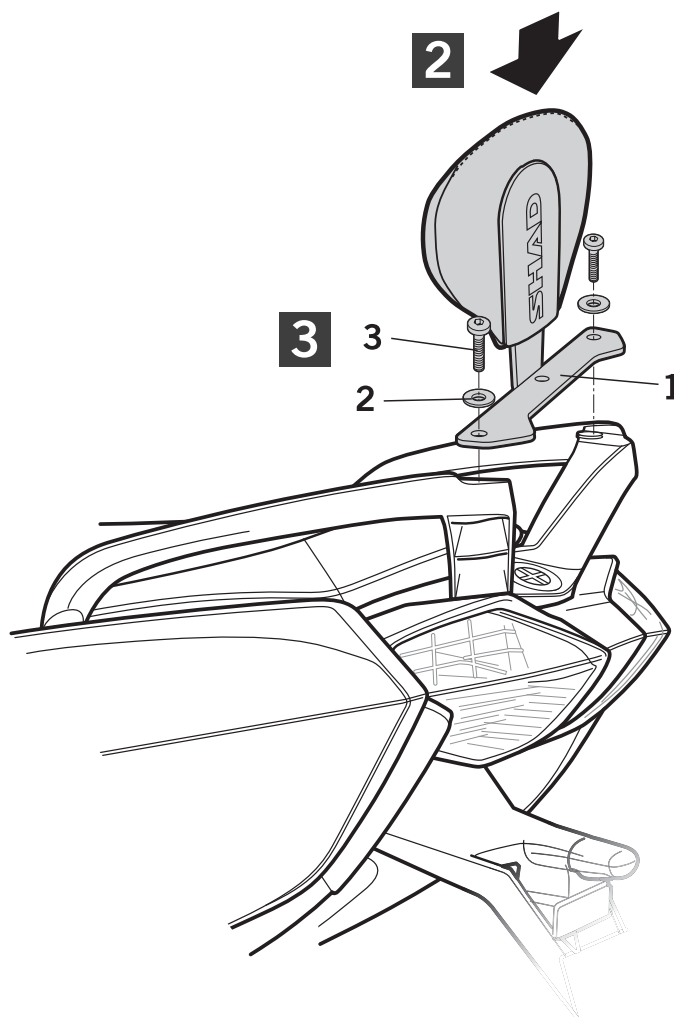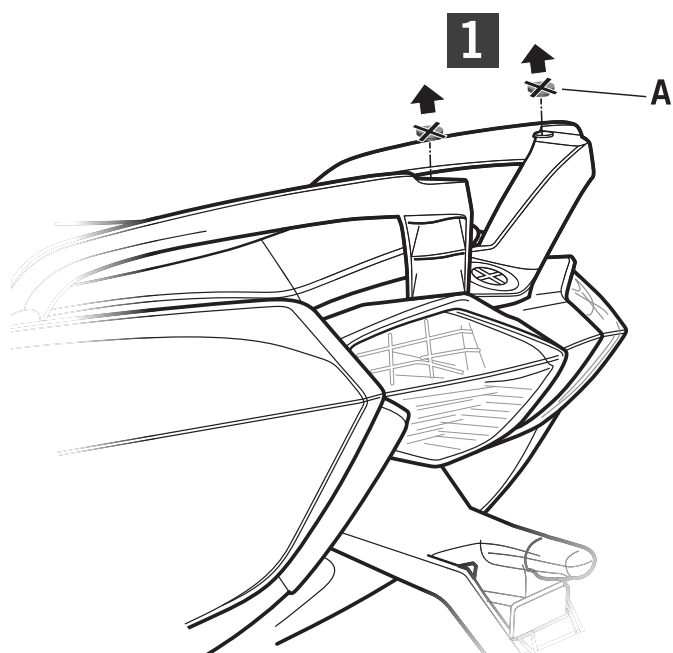

**IMPORTANT:** Based on European models. For compatibility with models in other continents, check [www.shad.es](http://www.shad.es)

[www.shad.es](http://www.shad.es)

REF. 500479 Edición 1ª